

NEW UDS Series

Digital Universal Scale

Yamato



*Designed for use in
water-soaked and high-humidity
operating conditions*



Model UDS-200W

Features of the UDS-101

- Highest resolution -- 2000 increments for this class of scale
- Low-profile design and quick response improve work-efficiency
- Large clear display, character size: 12(W) x 23(H)mm
- Over/under function convenience for packing fixed weights
- Stainless steel platform can be removed and immersed for cleaning
- Antibacterial plastic used for the front film and housing, helps maintain sanitary conditions

Capacity and increment:

Cap. 2.000kg x 0.001kg and
Cap. 4.000kg x 0.002kg, two capacities are available.

Main specifications:

Weighing system: Strain gauge load cell
 Display: Seven segmented LCD type, character size :12(w) x 23(h)mm
 Tare: One-touch tare
 Functions: Over/under function, auto-timer off at battery operation, etc.
 Power: 6 x D size (UM-1) battery, Max. 0.12W
 Water resistance: IP41
 Others: US version (lb, oz type) available

Features of the UDS-200

- Highest resolution -- 2000 increments for this class of scale
- Suitable size and quick response improve work-efficiency
- Large clear display, character size: 12(W) x 23(H) mm
- Over/under function convenience for packing fixed weights
- Stainless steel platform can be removed and immersed for cleaning

Capacity and increment:

Cap. 2.000kg x 0.001kg,
Cap. 4.000kg x 0.002kg,
Cap. 10.00kg x 0.005kg and
Cap. 20.00kg x 0.01kg, four capacities are available.

Main specifications:

Weighing system: Strain gauge load cell
 Display: Seven segmented LCD type, character size:12(w) x 23(h)mm
 Tare: One-touch tare
 Functions: Over/under function, auto-timer off at battery operation, etc.
 Power: 6 x D size (UM-1) battery, Max. 0.12W
 Water resistance: IP41
 Others: US version (lb, oz type) available

Features of the UDS-200W

- Highest resolution -- 2000 increments for this class of scale
- Suitable size and quick response improve work-efficiency
- Large clear display, character size: 12(W) x 23(H) mm
- Over/under function convenience for packing fixed weights
- Stainless steel platform can be removed and immersed for cleaning
- The water-proof construction (IP65) of the main body means that it will work for a long time, even in severe operating conditions

Capacity and increment:


Cap. 2.000kg x 0.001kg,
Cap. 4.000kg x 0.002kg,
Cap. 10.00kg x 0.005kg and
Cap. 20.00kg x 0.01kg, four capacities are available.

Main specifications:


Weighing system: Strain gauge load cell
 Display: Seven segmented LCD type, character size :12(w) x 23(h)mm
 Tare: One-touch tare
 Functions: Over/under function, auto-timer off at battery operation, etc.
 Power: 6 x D size (UM-1) battery, Max. 0.12W
 Water resistance: IP65
 Others: US version (lb, oz type) available



Dimensions of the UDS-101

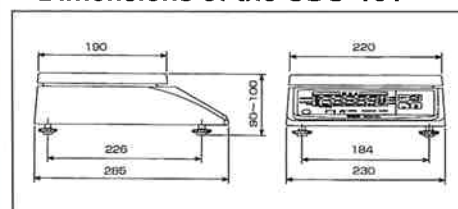

Dimensions of the UDS-200 and UDS-200W

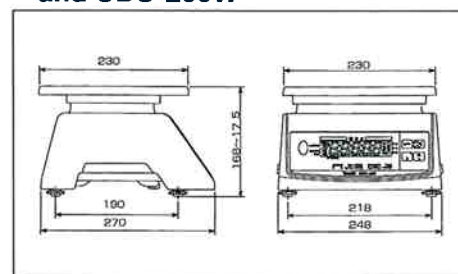

All illustrations and specifications are subject to change without notice.

YAMATO SCALE CO., LTD.

5-22 Saenba-cho, Akashi, Japan 673-8688
 Telephone : +81(78)918-5566·5567·5568
 Telefax : +81(78)918-5552

URL : <http://www.yamato-scale.co.jp/>

YAMATO SCALE GmbH

Hanns-Martin-Schleyer-Str. 13,
 D-47877 Willich, Germany
 Telephone : +49(2154)9159-0
 Telefax : +49(2154)40626

Distributed by