




Yamato

Dataweigh Ω TM

Always the best way to weigh

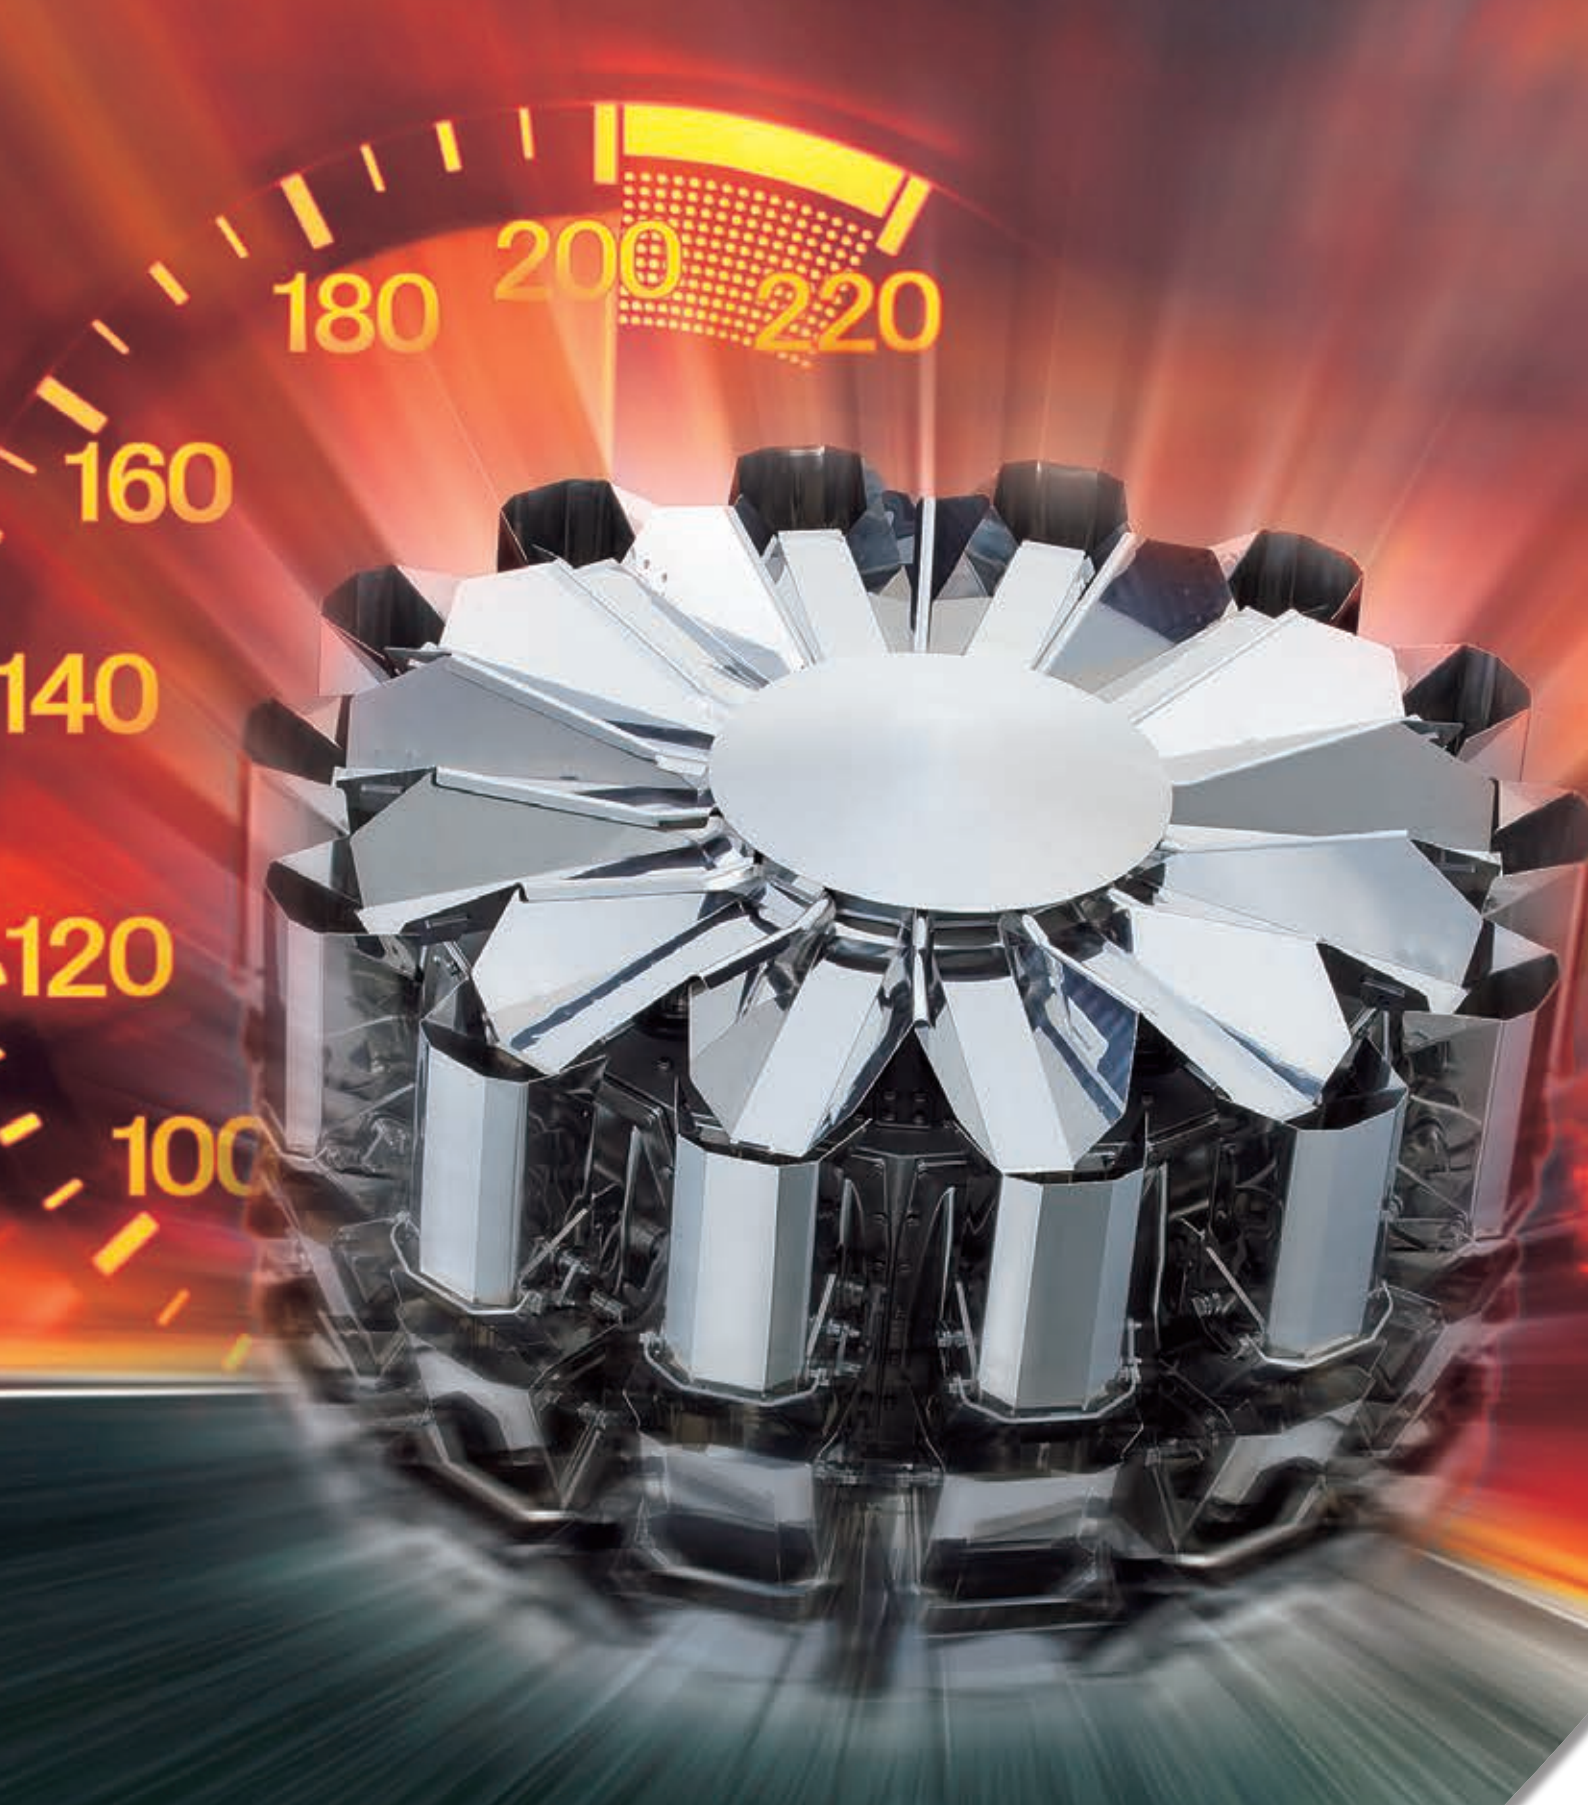

Always the best way to weigh

Dataweigh Ω ™

Yamato has been at the leading edge of weighing technology for over 100 years. "Dataweigh Omega"™ series utilizes groundbreaking multihead weighing technology.

● IMPROVING PRODUCTIVITY

200wpm

 High speed

*The above speed is for 14H double shift operation.

● EASY OPERATION

Auto-tuning

for optimum control

● FOOD SAFETY

Easy to clean

WATERPROOF

IP67 | Best Sanitation Structure

● EASY MAINTENANCE Quick recovery and minimum downtime

● ENVIRONMENTAL RESPONSIBILITY

60%less

 Reduced power consumption



“Dataweigh Omega”™ Series introduces innovative technology that is first in the world. This completely new multihead weigher provides customers with great benefits for productivity, operation, maintenance, food safety and environmental responsibility.

Increased productivity

Higher output and yield

- High-natural-frequency load cells minimize vibration impacts.
- Lattice digital filters reduce the influence of external vibrations and ensure higher weighing accuracy.
- Toggle-less gating mechanisms reduce mechanical impacts on load cells and suppress bucket gating noise.
- Individually adjustable collating chute angles maximize product discharge speed.
- Auto-tuning and Yamato AFC (automatic feeding control) ensure continuous optimum product flow.

Food safety

Best sanitation structure

- Simplified fully stainless steel streamlined design.
- Seamless YDB bucket* design leaves no spaces for dust or bacterial growth.

*Yamato Diffusion Bonding (YDB) buckets are used in specific models.

Easy to clean

- Compliant with IP67.
- Polygon-shaped bucket facilitates cleaning.

Ease of maintenance

- Improved design ensures easy replacement of actuators and feeders.
- No tools are needed to remove buckets and linear feeder pans.
- Enhanced protection of load cells can withstand up to 150 kg.

Improved troubleshooting

- Simple screen diagnostics allow quick identification of problem areas.
- Part replacement time indicators prevent possible failures.


Environmental responsibility

- Feedback control of feeders can achieve up to 60% power consumption reduction.*
- Wider product windows reduce sealing errors and contribute to reducing packaging waste.

*Compared to a conventional model



Optimum control of product flow

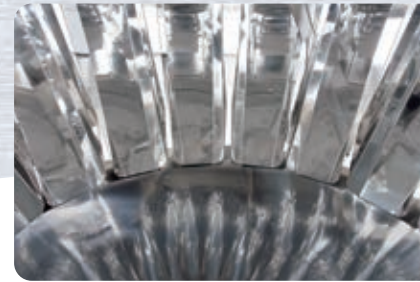

Individual collating chute




YDB bucket



Streamlined main body



Polygon-shaped feed and weigh buckets

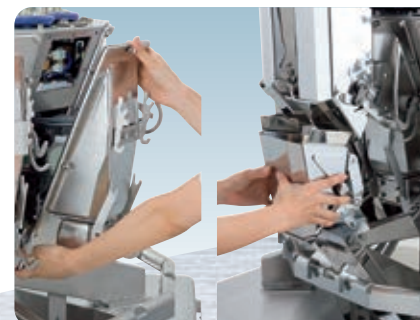

Unitization of actuator and feeder

Easily removable and attachable buckets



AICC+

Advanced Interactive Command Console Plus (RCU-1000)

This powerful new interactive command console provides easy access to all operational functions.

12.1-inch Color Touchscreen

300 Programs

USB access port

Built-in Printer

16 Languages

Fingerprint authentication

Ethernet access port

Built-in Camera

Easy Operation


- Auto-tuning, feeder amplitude and bucket gating set automatically, ensuring continuous optimal product flow
- Image-scanning with built-in cameras prevents program selection mistakes.
- Barcode readers use built-in cameras.
- Login management uses fingerprint authentication.
- Built-in operation manual



Automatic operation display



Built-in operation manual

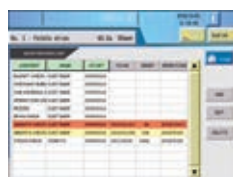

Maintenance information display

Optional Features



Counting Software



Priority head



Mixing Software



Multi-point Discharge



Product Inspection Camera*


*CCD camera for real-time product monitoring on top cone and linear feeder pans



Network Remote Control and Data Acquisition

Network connection capabilities (optional)

- PC remote control by LAN
- OPC & COM interface for data accumulation
- Feedback control between checkweigher and multihead weigher
- Troubleshooting and FAQs available in AICC+ support section of Yamato website
- Data acquisition

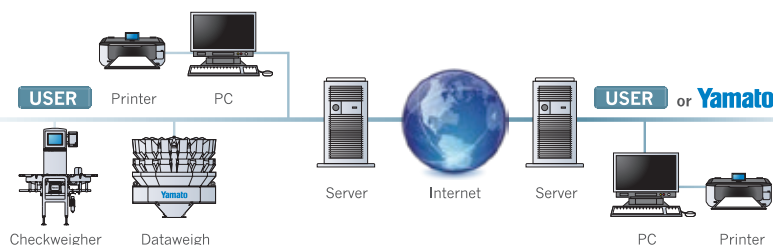


"Dataweigh Omega"™ series models

	Model	Weigh Heads	Max. weighing range (g)	Volume per pack (ml)	Max. speed (wpm)	Max. discharge points	Dimensions	
							Width (mm)	Height (mm)
Dataweigh Omega series	0-0114S	14	500	1,000	210	1	800	950
	0-0116M	16	500	1,000	240	2	1,000	1,300
	0-0120S	20	500	1,000	210	2	1,100	1,150
	0-0124M	24	500	1,000	300	4	1,300	1,350
	0-0132S	32	500	1,000	420	4	1,800	1,650
	0-0132M	32	500	1,000	420	4	1,800	1,650
	0-0310S	10	1,000	3,000	100	1	1,200	1,400
	0-0312M	12	1,000	3,000	140	2	1,200	1,500
	0-0314S	14	1,000	3,000	200	1	1,200	1,250
	0-0316M	16	1,000	3,000	220	2	1,600	1,650
	0-0320S	20	1,000	3,000	200	2	1,600	1,750
	0-0320M	20	1,000	3,000	250	2	1,600	1,750
	0-0324M	24	1,000	3,000	300	4	1,800	1,950
	0-0610S	10	2,000	6,000	85	1	1,400	1,450
	0-0614S	14	2,000	6,000	170	1	1,400	1,500
	0-0616M	16	2,000	6,000	220	2	1,600	1,650
	0-0620S	20	2,000	6,000	170	2	1,800	1,550
	0-0620M	20	2,000	6,000	220	2	1,800	1,950
	0-0624M	24	2,000	6,000	300	4	2,000	2,200
	0-1214S	14	3,000	12,000	130	1	1,600	1,900
	0-1220S	20	3,000	12,000	130	2	2,100	2,400
	0-1814S	14	5,000	18,000	100	1	1,800	2,000

Above specifications and dimensions are subject to change without notice.

Mixing Application

- Yamato's mix applications, which use a high-speed combination calculation system, can mix up to 8 different products on one weigher.
- Dataweigh Omega's mixing software handles a wide range of combination calculations. It optimizes among different product groups to achieve the best mix with high accuracy of individual components, for a total package weight.

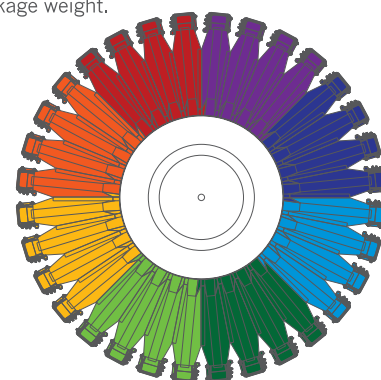

Wide variety of weighing applications



Snacks



Bakery



Confectioneries



Pasta



Cereal




Nuts & dried fruits




Pet food




IQF products




Fresh produce



Meat, seafood & poultry



Cheese



Non-food/ household items

Maximizing packaging performance

Dataweigh Ω ™
Frontier/Divided Weigher



ADW-O-0132F

Benefits of “Dataweigh Omega”™ Frontier

Maximize production output

- Increase productivity through high-speed multipoint discharge
- Minimize production waste through wider product window
- Small footprint

Increase packaging versatility

- VFFS (duplex, triplex, 4-tube, 6-tube) versatility
- Applicable to multi-point horizontal packaging machines and multi-lane tray lines

Contribute to environmental protection


- Reduce packaging waste and weight
- Lower total cost of ownership

Providing various discharge patterns

“Dataweigh Omega”™ Frontier series offers various types of discharge patterns

● Single Discharge	● 2-Point Discharge	● 3-Point Discharge
● 4-Point Discharge	● 6-Point Discharge	


Expanding packaging flexibility

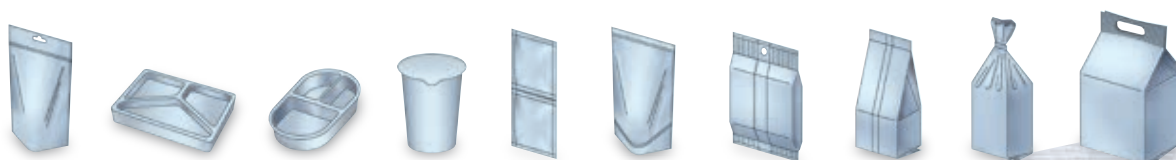

Always the best way to weigh


Independent Discharge Channels

Changing from a standard single chute structure to a dual chute structure provides wider product discharge windows in high-speed operation.

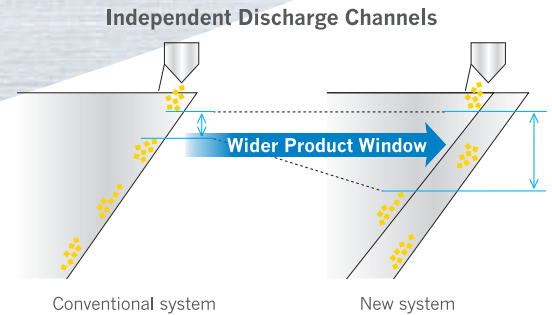

Bottom Based Handling Device (BBHD)

The bottom based handling system temporarily retains the product that has dropped to the discharge chutes and on release ensures that no product is within the seal zone of the bag-maker. This reduces product waste and allows the use of thinner packaging film with ensuring sufficiently sealing time.

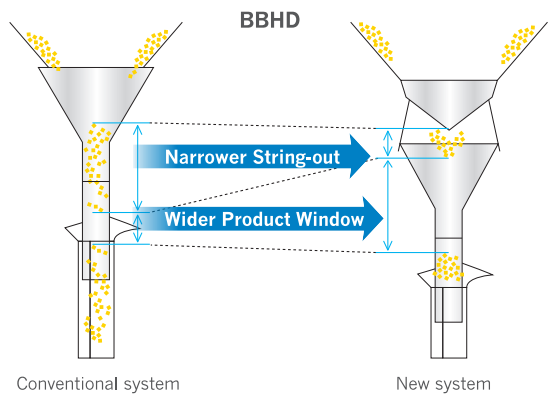

Simultaneous combination


High accuracy and output are realized.
Less loss means a fast return-on-investment.

Multi-point Discharge

Yamato Multihead weighers with 1 to 6 discharge gates can fill tray lines, cup lines, HFFS, VFFS, rotary packing machines and other similar packaging applications. Multipoint discharge allows increased production.

Divided Weigher

Divided weigher is comprised of completely independent discharge channels divided from one weigher, allowing weighing with higher speed and accuracy. Wider product windows with BBHD maximize multihead weigher performance in high-speed small bag lines.

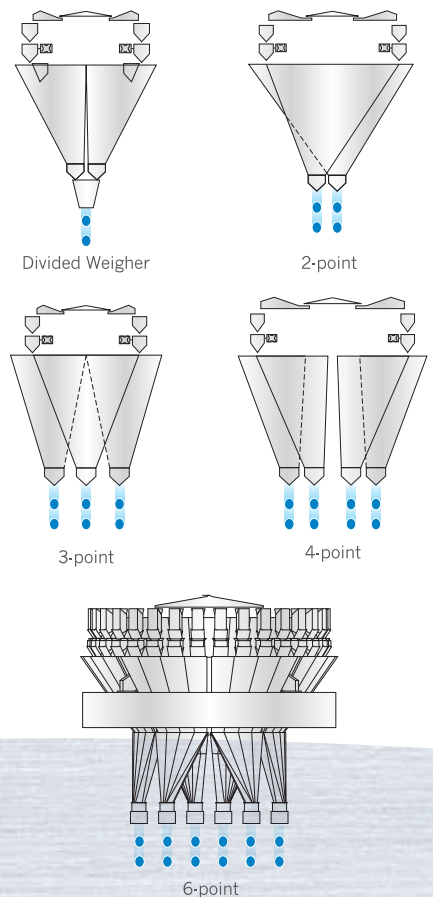

■ "Dataweigh Omega"™ Frontier series models

	Model	Weigh Heads	Max. weighing range (g)	Volume per pack (ml)	Max. speed (wpm)	Max. discharge points	Dimensions	
							Width (mm)	Height (mm)
Dataweigh Omega Frontier series	0-0114F	14	500	1,000	210	2	800	1,500
	0-0120F	20	500	1,000	315	3	1,100	1,500
	0-0128F	28	500	1,000	420	4	1,500	2,000
	0-0132F	32	500	1,000	630	6	1,800	2,000
	0-0314F	14	1,000	3,000	200	2	1,200	1,700
	0-0320F	20	1,000	3,000	300	3	1,600	1,900
	0-0614F	14	2,000	6,000	170	2	1,400	1,800

Above specifications and dimensions are subject to change without notice.

About Yamato & Dataweigh™

Yamato Scale Co., Ltd. was founded in 1920 and has always been a leading manufacturer in the world of weighing machinery. In 1979, the first Dataweigh ADW-110 was developed. Since then, we have introduced many groundbreaking technologies, creating today's high-speed and highly accurate multihead weigher 'Dataweigh Series', which is used throughout the world. Our headquarters are in Akashi, Japan, and we have regional offices in the U.S.A., Germany, Netherlands, U.K., France, Russia, China, India, UAE, Mexico, Thailand, Italy and South Africa. We also have a joint-venture in Korea and cover more than 70 countries with our representatives. Our highly experienced sales and service network provides customers around the world with a high level of expertise and service.

■ On-site-service



Installation



Application



Training



Repairs



Maintenance




Helpdesk & hotline

■ In-house-service

Worldwide Sales & Service Network

Yamato is the only manufacturer of multihead weighers with wholly owned operations in America, Europe and Asia.

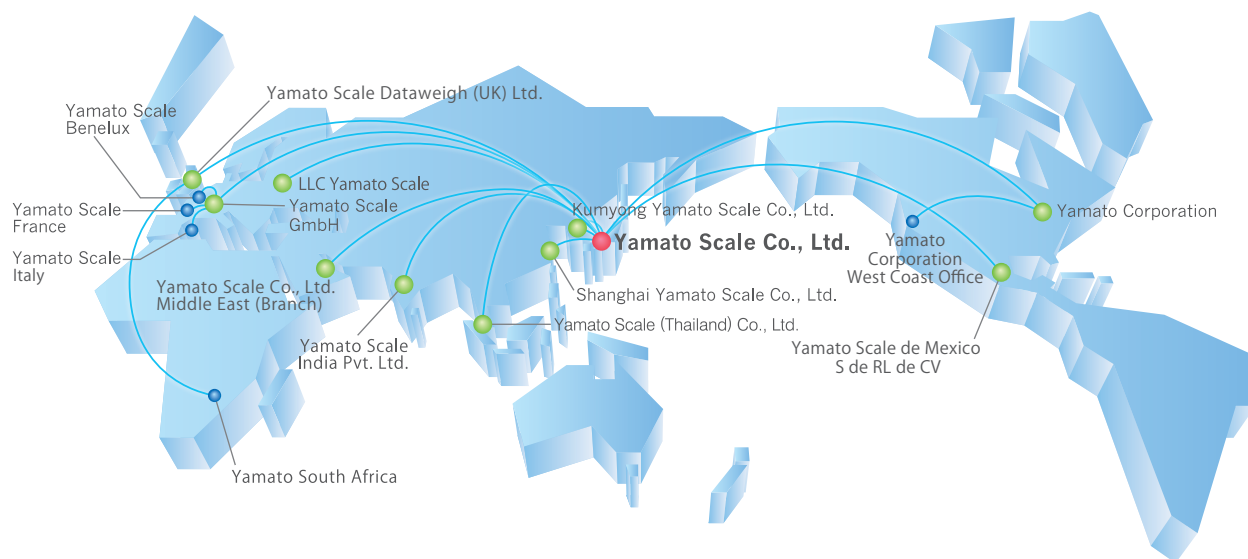

Spare Parts & Service

Yamato Spare Parts and Service are subject to the same high demands of quality as the machines themselves.

Speed, weight and volume listed are standard. Other ranges are also available when required, please contact Yamato.

This machine is covered by number of patents worldwide. All illustrations and specifications are subject to change without notice.

Yamato Yamato
GENUINE | BLUE ORIGINAL
PARTS AND SERVICE

Yamato Scale Co., Ltd.

5-22 Saenba-cho, Akashi, Japan 673-8688

URL : www.yamato-scale.co.jp/en/

Telephone : +81 78 918-5566-5567-5568

Telefax : +81 78 918-5552

Yamato Corporation

1272 Dakota Dr. Grafton,
WI 53024, U.S.A.

Telephone : +1 262 236 0000

Telefax : +1 262 236 0036

URL : www.yamatoamericas.com

E-mail : info@yamatoamericas.com

Yamato Corporation West Coast Office

20451 James Bay Circle
Lake Forest, CA 92630, U.S.A.

Telephone : +1 949 238 4500

URL : www.yamatoamericas.com

E-mail : info@yamatoamericas.com

Yamato Scale de Mexico S de RL de CV

Queretaro Innovation Technology Park,
Lot 90 Module 1 Km 2+200 State Highway
431, El Marques, QRO 76246 Mexico

Telephone : +52 55 2628 6140

E-mail : info@yamatoamericas.com.mx

Yamato Scale Dataweigh (UK) Ltd.

Unit 6B, Millennium Way, Leeds,
West Yorkshire, LS11 5AL, U.K.

Telephone : +44 113 322 1546

Telefax : +44 113 350 2020

URL : www.yamatoscale.co.uk

E-mail : sales@yamatoscale.co.uk

Yamato Scale GmbH

Hanns-Martin-Schleyer-Str. 13,
D-47877 Willich, Germany

Telephone : +49 2154 9159-0

Telefax : +49 2154 40626

URL : www.yamatoscale.com

E-mail : sales@yamatoscale.com

Yamato Scale France

3 Avenue du Canada, Bâtiment Gamma,
91940 Les Ulis, France

Telephone : +33 1 64 53 24 40

Telefax : +33 1 69 07 26 79

URL : www.yamatoscale.fr

E-mail : vente@yamatoscale.com

Yamato Scale Benelux

Edisonstraat 2, 5051 DS Goirle,
The Netherlands

Telephone : +31 13 220 1117

Telefax : +31 13 460 9081

URL : www.yamatoscale.nl

E-mail : ysb@yamatoscale.com

Yamato Scale Italy

Via Scirea 5/A

43122 Parma, Italia

Telephone : +39 521 1475 488

Telefax : +39 521 1475 336

URL : www.yamatoscale.it

E-mail : sales-it@yamatoscale.com

LLC Yamato Scale

Office 50,51,59-65 Building 32A
Khoroshevskoe shosse

123007 Moscow, Russia

Telephone : +7 495 620 4870

Telefax : +7 495 620 4877

URL : www.yamatoscale.ru

E-mail : salesru@yamatoscale.com

Shanghai Yamato Scale Co., Ltd.

368, Qingda Road, Heqing Industrial Field, Pudong,
Shanghai, 201201, China

Telephone : +86 21 5897 3377

Telefax : +86 21 5897 3737

URL : www.yamatosh.com

Yamato Scale India Pvt. Ltd.

B-104, Okhla Industrial Area, Phase-I,
New Delhi 110020, India

Telephone : +91 11 4607 2882

Telefax : +91 11 4607 2881

E-mail : info@yamatoscale.co.in

Yamato Scale (Thailand) Co., Ltd.

88/6 Moo 23, Soi Thidinthai, Thepharak Rd.,
Bangpleeyai, Bangplee, Samutprakam 10540, Thailand

Telephone : +66 2 136 9773

E-mail : yth@yamato-scale.co.jp

Yamato Scale Co., Ltd. Middle East (Branch)

Dubai Airport Freezone, UAE

LIU-A07, P.O. Box : 371911

Telephone : +971 4295 2730

Telefax : +971 4295 2729

URL : www.yamatomiddleeast.com

E-mail : yme.office@yamato-scale.co.jp

Yamato South Africa

Unit 3, 19 Silverstone Crescent,

Kyalami Business Park, Kyalami, 1684,

Johannesburg, South Africa

Telephone : +27 10 534 8144

Telefax : +27 86 572 4403

URL : www.yamatoscale.co.za

E-mail : salessa@yamatoscale.co.uk